Installation

The GC3 loudspeaker can be installed both on the ceiling and on a vertical surface. It is strongly recommended that the mounting surface is flat (not curved).



The product has to be installed at a maximum height of 2 meters (false ceiling or wall).



Ensure that the mounting surface is free from obstructions, pipes or studs, either in front and behind the surface.

 


 
The cable runs and cable pipes shall be set according to the loudspeaker system configuration. The cables must be of adequate quality, suitable for the installation's environmental conditions and with proper copper section to minimize power loss.

Remove the grill from the loudspeaker and keep it in a safe place.




- Position the cutout template and mark the surface accordingly.
- Drill a pilot hole, then cut all of the way around the circular outline with a cutting saw.






Pull the speaker wire out of the hole and connect it to the loudspeaker.

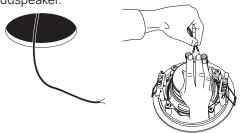

Lift one clamp of the loudspeaker and insert it into the hole paying attention to not hurting the hands.

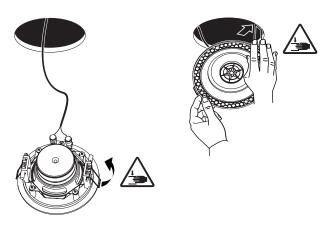

6 Lift the other clamp and insert in into the hole in order to set the loudspeaker in its final position.




7 Reposition the grill on the loudspeaker.



The input signal terminals of loudspeakers model GC3 shall be provided by speaker output terminals of an amplifier classified ES1/PS2 according to IEC/EN 62368-1.



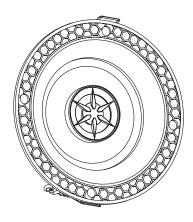

GC3
3" ceiling/in-wall full range loudspeaker



This equipment is not suitable for use in locations where children are likely to be present

To ensure proper operation, please carefully read this owner's manual and safety instruction before using the product.

After reading this manual, be sure to keep it for future reference.

Packing List


Upon arrival, carefully inspect the shipping carton, then examine and test your new amplifier. If you find any damage, immediately notify the shipping company. Check that the following parts are supplied with the product.

- 3" loudspeaker
- Circular or square grill according to the speaker model
- · Cutout template
- · This user guide

Loudspeaker Wiring

Ensure that the amplifier is unplugged from the mains before making any connections.

Connect the input terminals of the loudspeakers to the speaker output terminals of the amplifier. Always check to ensure polarity is correct: L(left) to L, R(right) to R, "+" to "+", and "-" to "-".

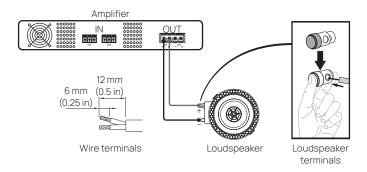



Note: In case of sonic artifacts, roughness or distortion, reduce the signal volume to a lower setting. Never allow the amplifier to be driven into "clipping". Damage caused by operating the speakers at distorted volume levels is not covered by the warranty.

IMPORTANT SAFETY INSTRUCTIONS



Warning. Failure to follow these safety instructions could result in fire, shock or other injury or damage to the device or other property.

- · Read these instructions.
- · Keep these instructions.
- · Heed all warnings
- Follow all instructions.
- Installation and commissioning may only be carried out by qualified and authorized personnel.
- Do not use this apparatus near water
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Only use attachments/accessories specified by the manufacturer.
- Do not expose this apparatus to dripping or splashing and ensure that no objects filled with liquids, such as vases, are placed on this apparatus.
- Prior to installing the speakers into any ceiling/wall, check the structure for weight bearing ability and avoid contact with any wiring or plumbing that might be behind the surface area.
- Installing on soft materials or in areas incapable of supporting

the speakers' weight may cause personal injury or damage to the speaker.

- Make sure the speaker is properly secured to the ceiling/wall. Please use the proper screws, bolts, or anchors. Failure to do so may cause the speaker to become unsecured and cause potential damages/ injuries.
- Damage to the woofer and tweeter may occur if the speaker is dropped or hit, resulting in no sound or distorted sound.
- Never overdrive your speakers to the point of distortion and always reduce volume prior to switching input sources.
- Use only approved and certified wiring in your installation, do not stretch or place the wire in contact with sharp objects.
- Prior to removing cables ensure all power to your amplifier and other components is turned off.





KGEAR Smart Audio Solutions

3" Ceiling/In-Wall Two-Way Loudspeaker Lo-Z 16Ω

Type	specifications	
	ull range loudsp	eaker
	nagnet woofer ar dome tweete	-
Frequency Re 120 Hz - 2	sponse 0 kHz (-10 dB)	
Sensitivity 90 dB (1 W	/, 1 m)	
Max SPL ¹ 106 dB (pe	eak)	
Coverage 130°		
	GC3	
Power Handlin		
Nominal Impe $16~\Omega$	dance	
Handling	& Finishes	
	Øouter [Øinner] x H)] x 58 mm (Ø4.5	
Minimum requ	uired mounting depth 5 in)	
Max installation 30 mm (1.1	on panel depth 18 in)	
Cutout diame Ø 100 mm		
Weight 0.4 kg (0.8	38 lb)	
IP Rating IP20		
Maximum ope T Max 35°	erating ambient tempe C	erature.
BLACK	€ GC3-RNB	GC3-SQB

1 Maximum SPL is calculated using a signal with crest factor 4 (12dB) measured at 1 m.

GC3-RNW

GC3-SQW



This device is in compliance with applicable CE standards and regulations. Before putting the device into operation, please observe the respective country-specific regulations!



Management of WEEE. Please dispose of this product at the end of its operational lifetime by bringing it to your local collection point or recycling center for such equipment.



This equipment is not suitable for use in locations where children are likely to be present