


VC-WM11 INSTALLATION GUIDE

1. Pre-installation notes


- 1.1 The load capacity of the arm mount is 10KG
- 1.2 You are advised to install the arm mount on solid wood or a concrete wall
- 1.3 Avoid drilling into areas where wires and pipes are buried underneath, such as gas pipes/water pipes/cables

2. Installation Method


- 2.1 Remove screws from both sides of the video camera mounting bracket

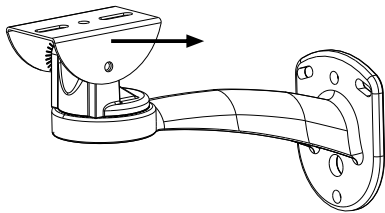


- 2.4 Use wall screws and anchors to secure the arm mount on the wall

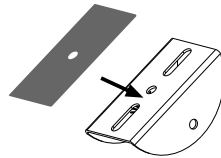


- 2.3 Use locking screws to lock the video camera mounting bracket on the video camera

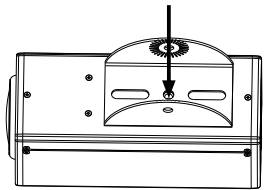

- 2.2 Place the adhesive rubber pad on the video camera mounting bracket

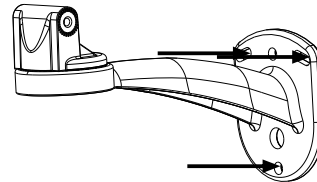

- 2.5 After completing Step 2.3, install the video camera back to the arm mount

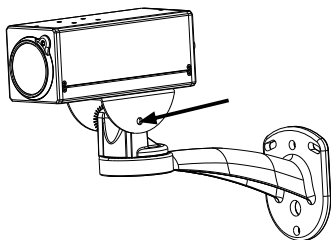

3. Packing list



x1
Instruction for installation



x1
Rubber pad



x2
Locking screw



x3
Ring pad



x4
Wall screw



x4
Anchor

- For questions about installation, please scan the following QR Code; a support person will be assigned to assist you



SERVICE